


Changing the Fuse on the E2000

Unplug the machine before servicing it.



Unscrew 4 screws and remove the drive cover.

The fuse is located on the right.

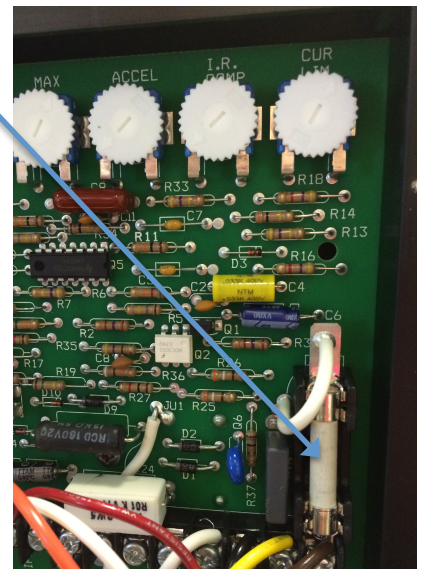

Replacement Fuses specifications:
These fuses can be bought at a local electrical store.
250V FA 3ABPp- Free 10A

